

Power-on and Network Configuration

Indoor Monitor

- IP Indoor Monitor

Power on the device by POE or power supplier (12V/1A DC), ensure internet connectivity and under the same LAN with door phone. The device is on DHCP mode by default, if you want static IP or Wi-Fi connection, please refer to the Administrator Guide.

- 2-Wire IP Indoor Monitor

Power on the device by power supplier (24V/1.5A DC or 48V/1.25A DC), and you can connect wire network through RJ45 port or Wi-Fi mode. The device is on DHCP mode by default, if you want static IP or Wi-Fi connection, please refer to the Administrator Guide.

Note: Indoor Monitor will act as a master device in the 2-wire solution.

Door Phone

- IP Door Phone

Power on the device with 12V/1A power supply by POE or power supplier (12V/1A DC), ensure internet connectivity and under the same LAN with indoor monitor. The device is on DHCP mode by default, if you want static IP or Wi-Fi connection, please refer to the Administrator Guide.

 
- 2-Wire IP Door Phone

Connect the device to the master device by Power Line Communication, and can power on door phone and connect to the internet.


Note: Door phone will act as a slave device in the 2-wire solution, and the farthest distance between the master device and slave device is 300m.

Get SmartPlus Service


1. Then after indoor monitor boots up, tap "More > Settings > Advanced Settings > SmartPlus Account" indoor monitor will scan and list out all units which under the same LAN (The default password to access Advanced Settings is 123456).

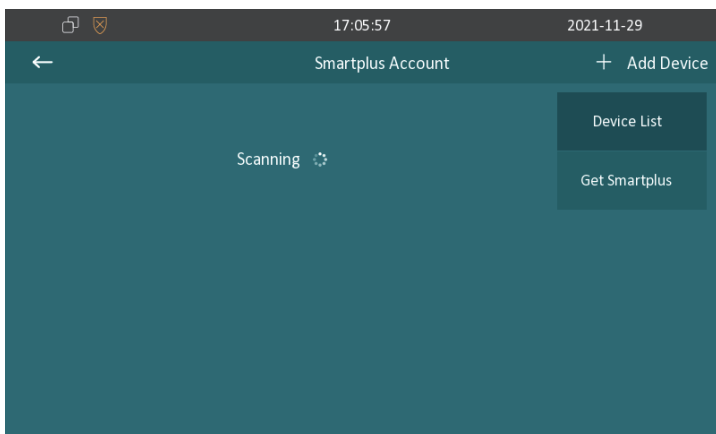

2. Tap the unit which is listed out to get into the setup interface.

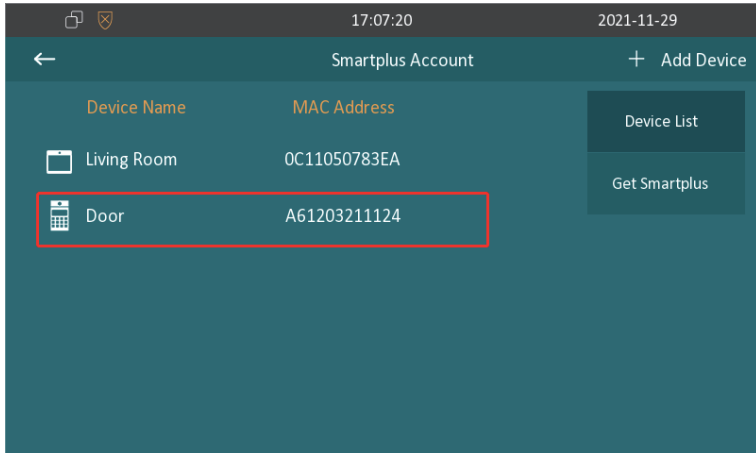


 3. Select correct **Device Type** and set up a **Device Name** then tap the  icon on the right top to submit.

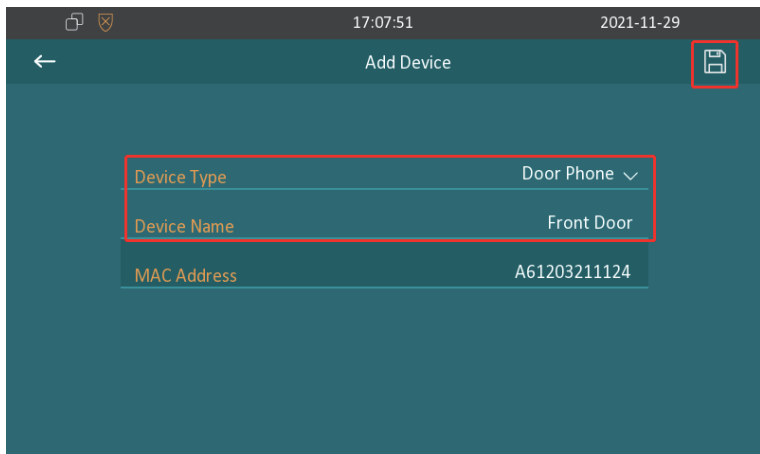



4. Use the App with a scanning feature on your mobile phone to scan the QR code which is shown on indoor monitor to download SmartPlus App, or download SmartPlus App from Google Play store (Android) or App Store (iOS).

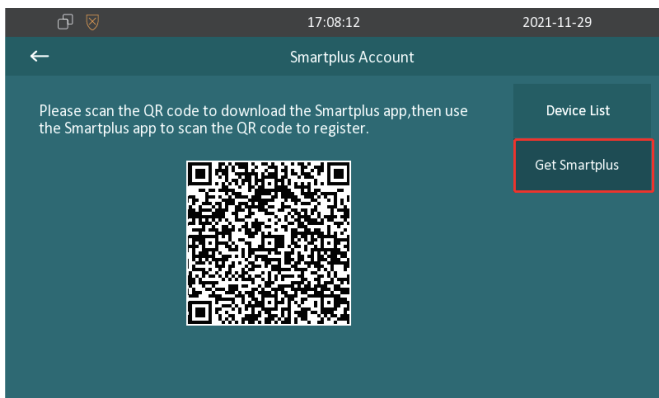
Note: Recommend to using some popular Apps like Wechat, etc.



5. Run SmartPlus App, agree the **Terms&Policies** and assign all permissions.

6. Tap the  icon on the left top of SmartPlus to scan the QR code on indoor monitor to enter the registration interface. And fill in your registration information, click **Submit** to save.

 7. Tap the  icon on the left top of SmartPlus again to scan the QR code included in the email sent to your email address (Which will be sent once the registration is done).

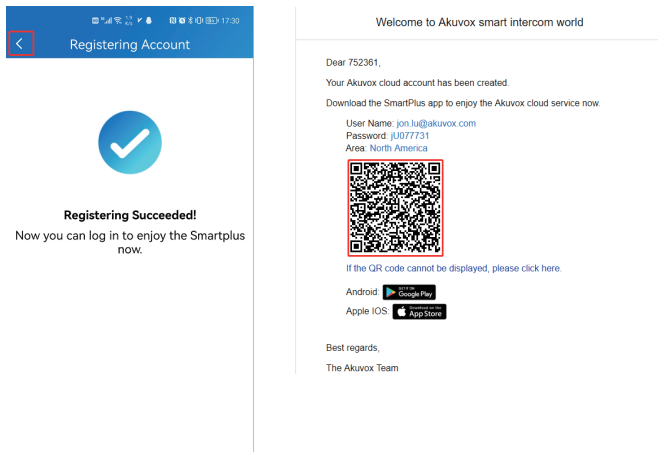

8. After all, you just need to reset indoor monitor and door phone.

Notice Information

Information contained in this document is believed to be accurate and reliable at the time of printing. This document is subject to change without notice, any update to this document can be viewed on Akuvox' s website:
<http://www.akuvox.com> © Copyright 2022 Akuvox Ltd. All rights reserved.



AKUVOX (XIAMEN) NETWORKS CO., LTD.

ADD: 10/F, NO.56 GUANRI ROAD, SOFTWARE PARK II, XIAMEN 361009, CHINA
www.akuvox.com



YS00000425